


Flymo

GT500 WHEELS

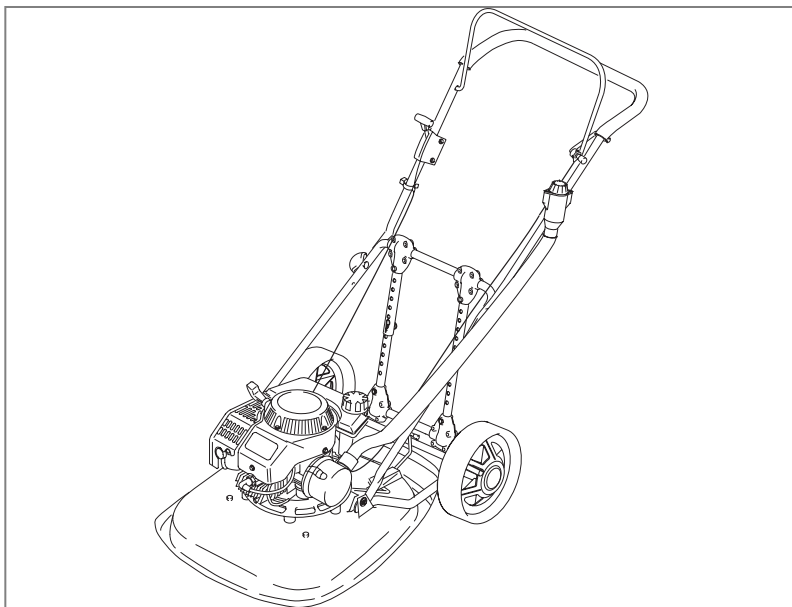

GB

IMPORTANT INFORMATION

Read before use and retain for future reference

D

WICHTIGE INFORMATION

Bitte vor dem Benutzen des Gerätes durchlesen und gut aufbewahren

F

RENSEIGNEMENTS IMPORTANTS

A lire avant usage et à conserver pour référence ultérieure

NL

BELANGRIJKE INFORMATIE

Leest u deze informatie voor het gebruik en bewaar ze voor toekomstige raadpleging

N

VIKTIG INFORMASJON

Les bruksanvisningen før bruk og oppbevar denne for senere bruk.

SF

TÄRKEÄÄ TIETOA

Lue tämä ennen käyttöä ja säilytä myöhempiä tarvetta varten

S

VIKTIG INFORMATION

Läs anvisningarna före användningen och spara dem för framtida behov

DK

VIGTIGE OPLYSNINGER

De bør læse dette før brug og gemme til senere henvisning

E

INFORMACIÓN IMPORTANTE

Léase antes de utilizar y consérvela como referencia en el futuro

P

INFORMAÇÕES IMPORTANTES


Leia antes de utilizar e guarde para consulta futura






I

INFORMAZIONI IMPORTANTI

Leggere prima dell'uso e conservare per consultazione futura

(GB)	INSTRUCTION MANUAL	(N)	BRUKSANVISNING
(D)	BEDIENTUNGSANWEISUNG	(SF)	KÄTTÖHJE
(F)	MANUEL D'UTILISATION	(S)	BRUKSANVISNING
(NL)	GEbruiksaanwijzing	(DK)	BRUGSANVISNING
(E)	MANUAL DE INSTRUCCIONES	(P)	ISTRUZIONI PER L'USO

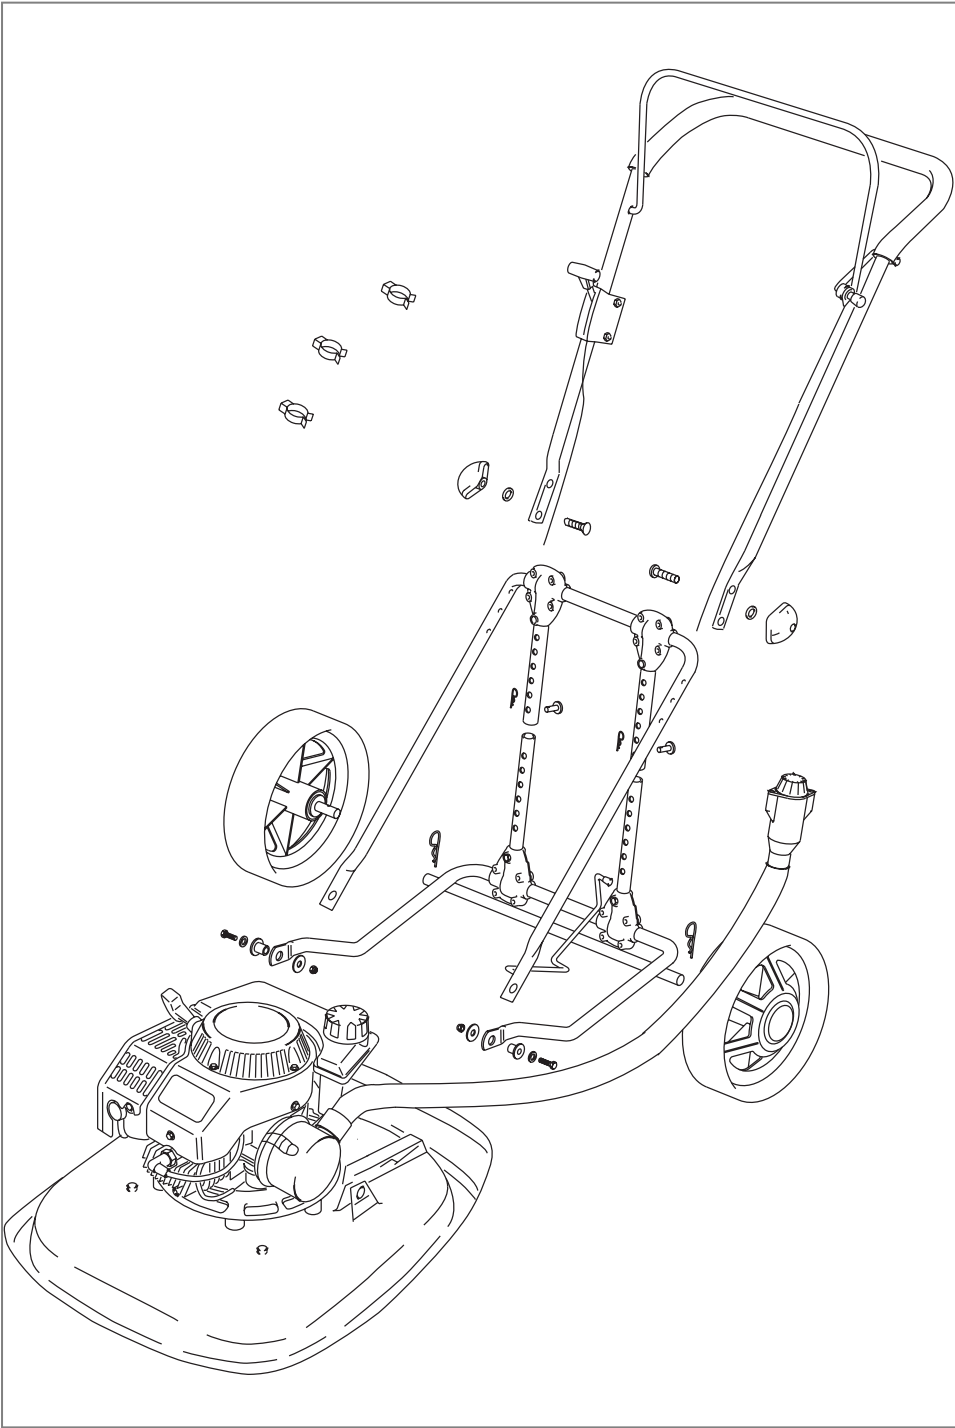

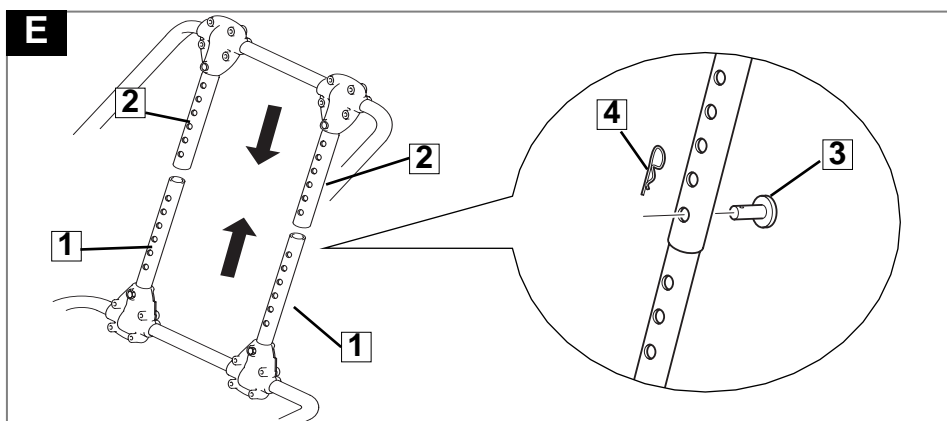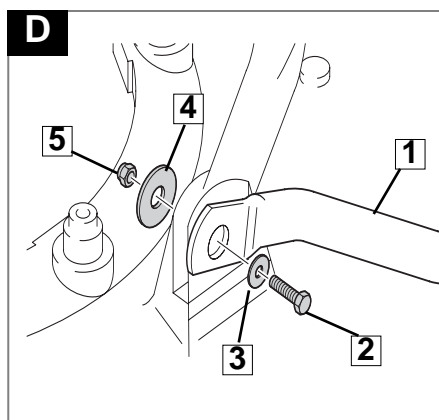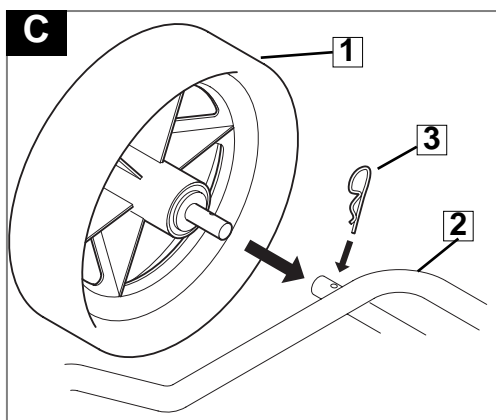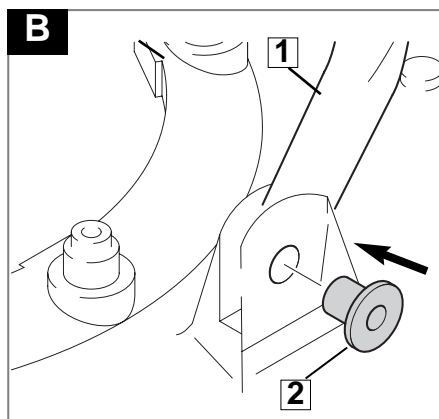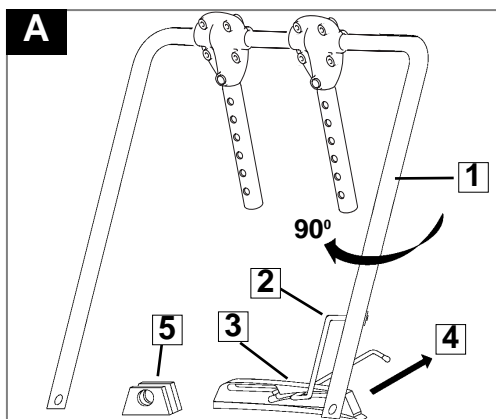

Fitting the Lower Handle to the Lawnmower

1. Feed the hook **(A2)** attached to the lower handle **(A1)** halfway through the centre slot of the guide **(A3)**, in the direction indicated by the arrow **(A4)**.
2. Maintaining the hook **(A2)** in the centre slot of the guide **(A3)** turn the lower handle **(A1)** clockwise through 90° to place both legs of the lower handle in position between the hood brackets **(A5)**. as illustrated in **Fig A**.
3. Fit the lower handle **(B1)** to the deck with the lower handle pin **(B2)** as illustrated in **Fig B**.

Fitting the Wheel frame to the lawnmower

1. Attach the wheels **(C1)** to the wheel frame **(C2)** with the wheel retaining clips **(C3)** as illustrated in **Fig C**.
2. Fit the wheel frame **(D1)** to the deck with the lower handle bolt **(D2)**, small washer **(D3)**, large washer **(D4)** and locknut **(D5)** as illustrated in **Fig D**.
3. Locate the lower telescopic tubes **(E1)** inside the upper telescopic tubes **(E2)** and secure with the pin **(E3)** and retaining clip **(E4)** as illustrated in **Fig E**.

For further information, refer to the full Instruction Booklet supplied with your product.

Electrolux Outdoor Products
Aycliffe Industrial Park
NEWTON AYCLIFFE
Co.Durham DL5 6UP
ENGLAND

Telephone - (00) 44 1325 300303 Fax - (00) 44 1325 310339

UK Telephone - 01325 300303 Fax - 01325 310339

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice. Electrolux Outdoor Products manufacture products for a number of well known brands under various registered patents, designs and trademarks in several countries.

© Electrolux Outdoor Products Ltd. Registered Office, Electrolux Works, Oakley Road, Luton LU4 9QQ
Registered number 974979 England



From the Electrolux Group. The world's No.1 choice.

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use.

More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

5119123-01

